



# Service Bulletin

AMI INCORPORATED • 1500 UNION AVENUE, S. E. • GRAND RAPIDS 2, MICHIGAN

February 18, 1959

## BULLETIN NO. 173 (Model "J")

SUBJECT: Model "J" Pushbutton Maintenance

The pushbuttons on Model "J" phonographs are made from acrylic plastic that will resist ordinary cleaning methods. There are, however, certain chemicals commonly found in most shops that can soften the plastic or cause it to craze.

Do not use: Acetone, alcohol, benzene, carbon tetrachloride, gasoline, glass window sprays, lacquer thinners, lighter fluid.

To clean the pushbuttons, wash with soap and water using a soft cloth. Dry them with a clean damp cloth. Rubbing with a dry cloth builds up a static charge that attracts dust. Oil or grease on the pushbuttons can be removed with a cloth wet with kerosene or hexane.

After removing dirt and grease from the buttons, wax them with a good grade of commercial wax. The wax will fill in minor scratches and help prevent further scratching.

The following cleaners and waxes are recommended.

### Cleaners

Parko Gloss Polish & Cleaner #4B-L  
Wilco Scratch Removing Compound #55  
O-Cedar of Canada M-37 Plastic Cleaner  
Ken-Glo  
Autogroom Cleaner  
McAleer Plexi-I-Glo Cleaner & Polish

Turco L-567 Cleaner  
Noxon Cleaner Polish  
Franklin's Plexiglas Cleaner  
Puritan's Plasti-Kleen  
Lincoln M-3028 Liquid Cleaner  
Simoniz Liquid Kleener

### Waxes

Permaseal  
Triple Life Wax & Paint Protection  
Simoniz Wax  
Duco #7 Wax

Franklin's Plexiglas Wax  
3M Auto Wax  
Parko Eze-Wax  
Johnson's Industrial Wax #102-C

APPLICATIONS ENGINEERING

CLB/hr